

TULLE COLLECTION

MATERIALS & CARE

MATERIALS

TEAK is known to be superior to other woods for outdoor furniture applications. The beautiful dense grain and high oil content of Teak allows it to resist rot, moisture, warping, and splintering. Wood weathers naturally to a beautiful silvery gray color unless treated. Treat with a timber protector to maintain color. Some surface roughness may develop, especially at the end grain, but over a period of about one year the natural weathering process will stabilize. Moderate checking in grain is normal with exposure to the elements. These small surface cracks in no way affect the structural integrity of the furniture. As weather conditions fluctuate, these small cracks may expand and contract.

RESIN WICKER is composed of polyethylene resin extruded into fibers and hand woven around an aluminum frame, resin wicker is a durable polymer where color is created by mixing dye straight into the resin. These processes result in a durable and weather resistant material.

SUNBRELLA® FABRIC is engineered with robust performance characteristics that provide resistance to fading and degradation from sunlight and chemical exposure. Sunbrella® fabrics are 100% solution-dyed acrylic, meaning the fibers are dyed in a color solution before they are woven—not printed on after the fabric's base cloth is made. These fabrics are also water-resistant, so the colors stay true for a long period of time.

CARE

TEAK wood furniture should be rinsed well after assembly to remove any dust remaining from the manufacturing process and prevent possible staining of concrete or tile. Although teak weathers well, we recommend a routine application of Teak Shield, Cabot's Australian Timber Oil, or other teak or timber protectant in extremely dry climates. Routine application of these products is also recommended for furniture used for dining purposes to protect against staining from food and drink spills.

For seasonal cleaning, rinse the furniture well and then scrub using a sponge or soft bristle brush with a mild cleaning solution of water, laundry detergent, and a very small amount of bleach. Rinse well with fresh water.

To restore teak to the original wood color, Cabot's Australian Timber Oil or any high-quality teak oil can be applied after cleaning.

RESIN WICKER requires little maintenance, however regular cleaning is recommended to keep furniture looking new. Wash gently with a mild non-abrasive cleanser, rinse well and let dry.

FABRIC should have dirt brushed off before it becomes embedded and liquid spills cleaned as soon as they occur. Blot (don't rub) with a clean, dry cloth. For oil-based spills, apply an absorbent such as corn starch, then remove by scraping gently with a straight edge. Spray with a mild cleaning solution (such as Dawn® or Woolite®) and water. Rinse the fabric thoroughly to remove all soap residue and air dry. Repeat if necessary.

WARRANTY

Oxford Garden warrants all outdoor furniture and accessories to be free from manufacturing defects in material and workmanship. Provided the furniture is assembled correctly and is subjected to normal use, Oxford Garden will cover your outdoor furniture under five, three, and one year warranties, varying by material. For more details regarding the Oxford Garden warranty, visit oxfordgarden.com/furniture-warranty



Thoughtful Design **MADE RIGHT**