



ISLAY BAR CHAIR

ASSEMBLY INSTRUCTIONS

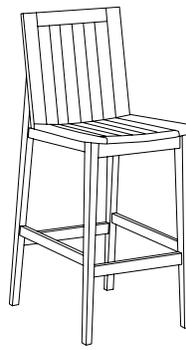


COMPONENTS

- ① Right Leg Assembly
Quantity: 1




- ② Left Leg Assembly
Quantity: 1




- ③ Back
Quantity: 1




- ④ Seat
Quantity: 1

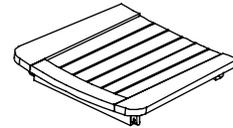

- ⑤ Front Leg Stretcher
Quantity: 1



- ⑥ Back Leg Stretcher
Quantity: 1




HARDWARE

- A 6m x 35 mm Wood Screw
Quantity: 2




- C 8mm Dowel
Quantity: 12



- B 6m x 60 mm Wood Screw
Quantity: 2



- D Allen Wrench
Quantity: 2




FINISHING ITEMS

Medium Grit Sandpaper

NOTE: Hardware pack may contain extra hardware.

NOTE: A hammer (not provided) will be needed for the assembly of this chair.

NOTE: If the furniture is going to be placed on a concrete or tile patio, it should first be rinsed well to remove the sawdust that may cause some staining.

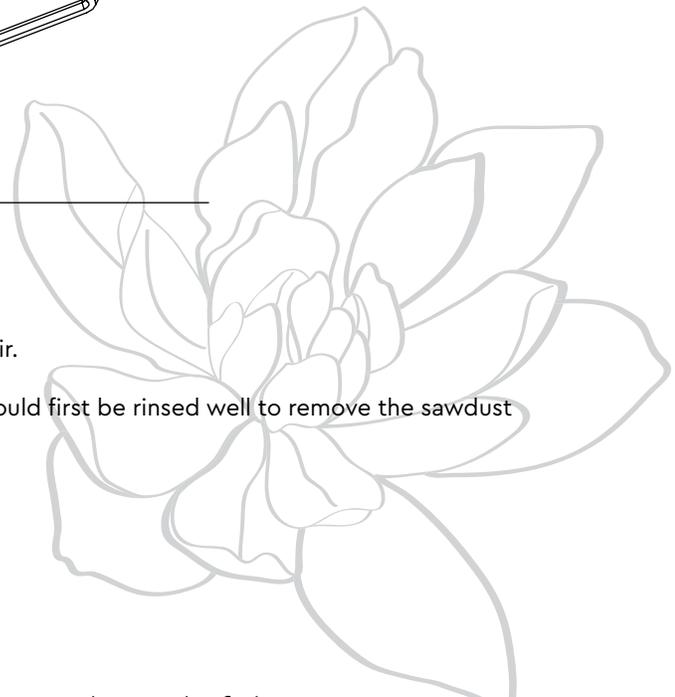


Thoughtful Design **MADE RIGHT**

INSTRUCTIONS


STEP 1

On a clean flat surface, e.g., cardboard, lay right leg assembly ① on its side, mortise holes facing up. Place the tenons of the seat assembly ④ into the mortises of the right leg assembly. Repeat for front leg stretcher ⑤ and back leg stretcher ⑥.

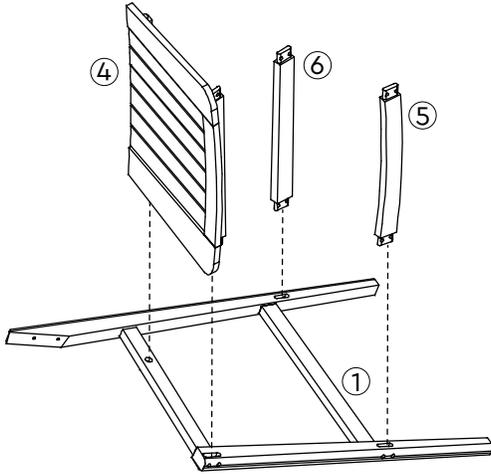

STEP 2


Next, insert the left leg assembly ④ into the rest of the assembled parts as shown.

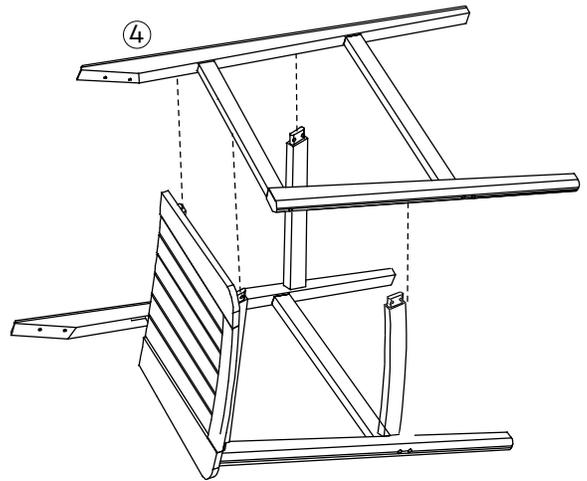

STEP 3


With a hammer, drive 12 dowels ③ into designated pre drilled holes as shown.

NOTE: Insert the tapered end of the dowels first.

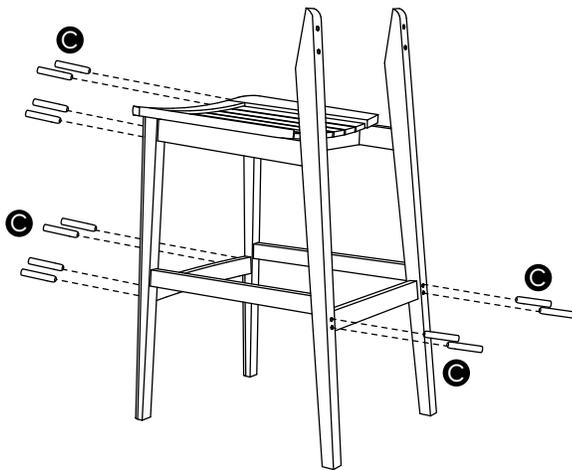

STEP 4

Next, secure the back assembly ③ into place.

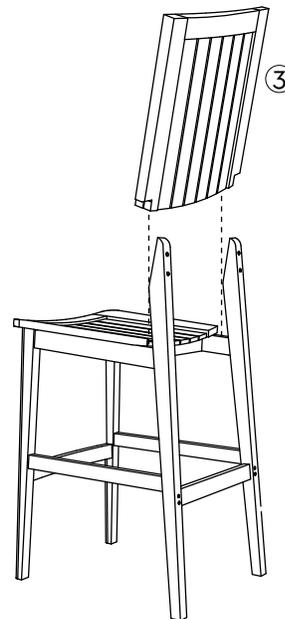

STEP 5

Lastly, secure the back by inserting 2 short 35 mm bolts ① into the top predrilled holes and 2 long 65 mm bolts ② as shown by using the provided allen wrench.

