



OXFORD ADIRONDACK FOOTSTOOL - ADFS
ASSEMBLY INSTRUCTIONS

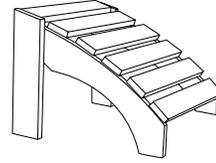

COMPONENTS

① Leg Rest
Quantity: 1

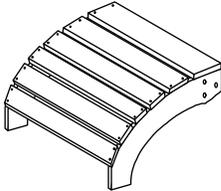

② Right Leg
Quantity: 1




HARDWARE

A Bolts
Quantity: 7




B Allen Wrench
Quantity: 2

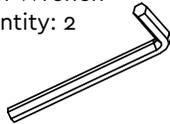

FINISHING ITEMS

Medium Grit Sandpaper

NOTE: If the furniture is going to be placed on a concrete or tile patio, it should first be rinsed well to remove the sawdust that may cause some staining.

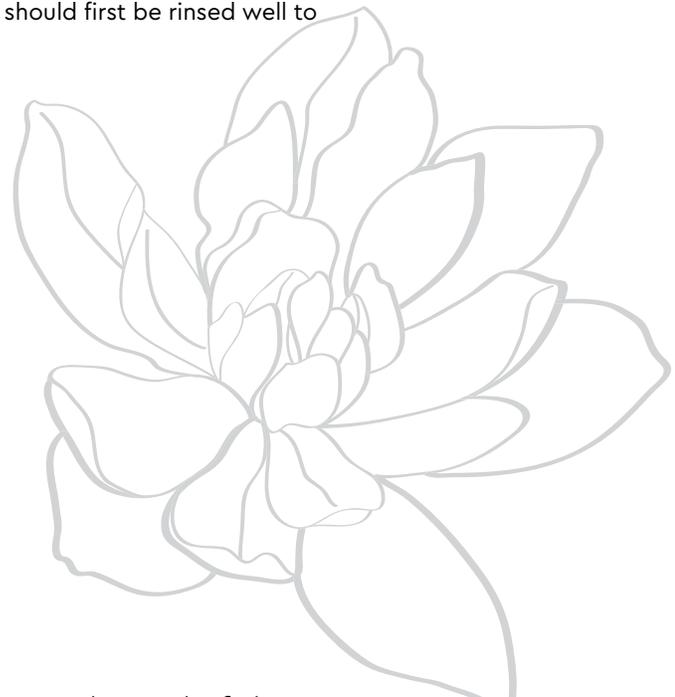


Thoughtful Design **MADE RIGHT**

INSTRUCTIONS

STEP 1

On a clean flat surface, lay leg rest assembly ① on the ground. Using the allen wrench provided, attach the right leg ② to the leg rest using 3 bolts ④.

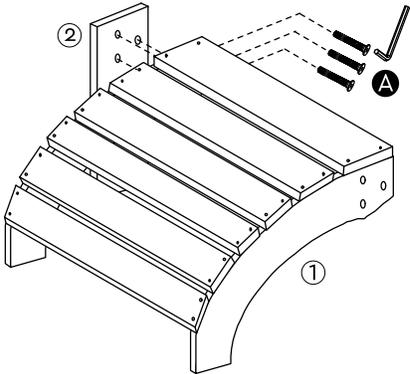

STEP 2

Repeat Step 1 for the left leg ③.

