



TRAVIRA MODULAR  
ASSEMBLY INSTRUCTIONS

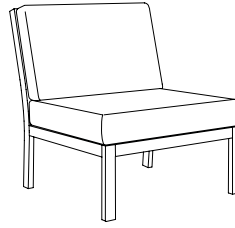

**COMPONENTS**

---

- ① Connecting Brackets  
Quantity: 2




**HARDWARE**

---

- Ⓐ BOLTS  
Quantity: 2



- Ⓒ ALLEN Wrench  
Quantity: 1



- Ⓑ Metal Washers  
Quantity: 2



**NOTES**

---


There is no assembly required for this unit.

Should you desire to secure modular seating to each other, connecting brackets and hardware are provided in this package.

BOLTS

Quantity: 2

See pg 2 for instructions

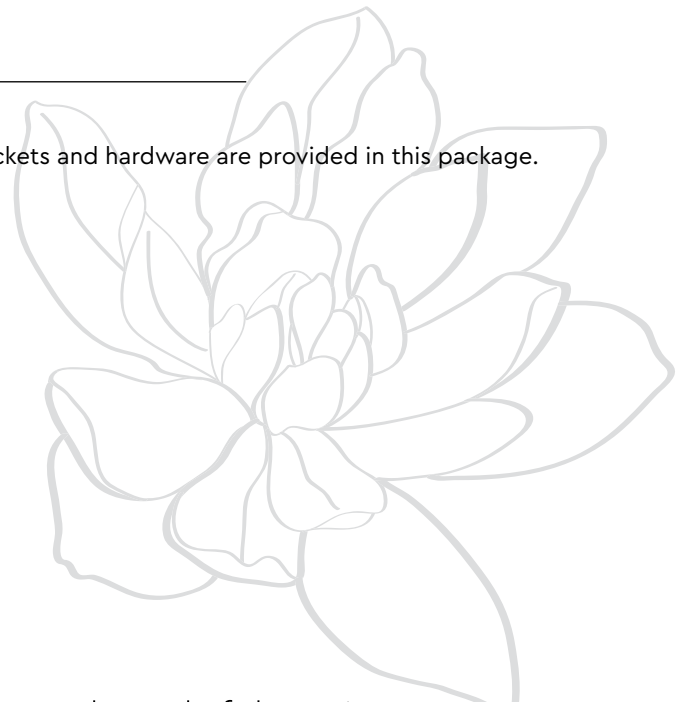

Thoughtful Design **MADE RIGHT**

# INSTRUCTIONS

## STEP 1

Should you desire to secure one modular unit to another, on a clean flat surface, first lay modular unit on it's back, place connecting brackets ① over holes located on the under side of the unit. Using the allen wrench provided, secure brackets by using washer ② and bolt ③ as shown.

