

STEP 1


Thread the hex nut () onto one end of the rod $(\ensuremath{\underline{3}})$ about one inch.



STEP 2


Thread rod into table top 1 until it touches the bottom of the table top.

NOTE: Do not over tighten in this step. Once the rod touches the bottom of the table top, reverse the rod one full turn. Tighten the hex nut securely with a wrench.

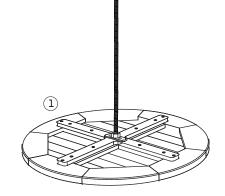


STEP 4

Next, thread the studs 0 into the base 4. Tighten the studs firmly using a wrench.

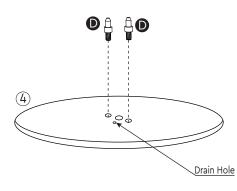


STEP 6

Insert flat washer () and locking hex nut () over the rod and secure tightly using an adjustable wrench.

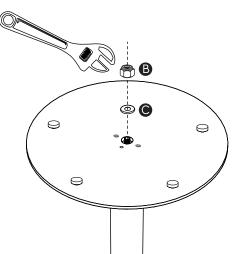

STEP 3

Slide pedestal post (2) over the rod and align notches with small plate on bottom of table as shown.

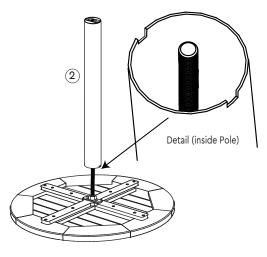

STEP 5

Next, carefully place the pedestal base over the post making sure to line up the studs with the holes in the plate as shown.

